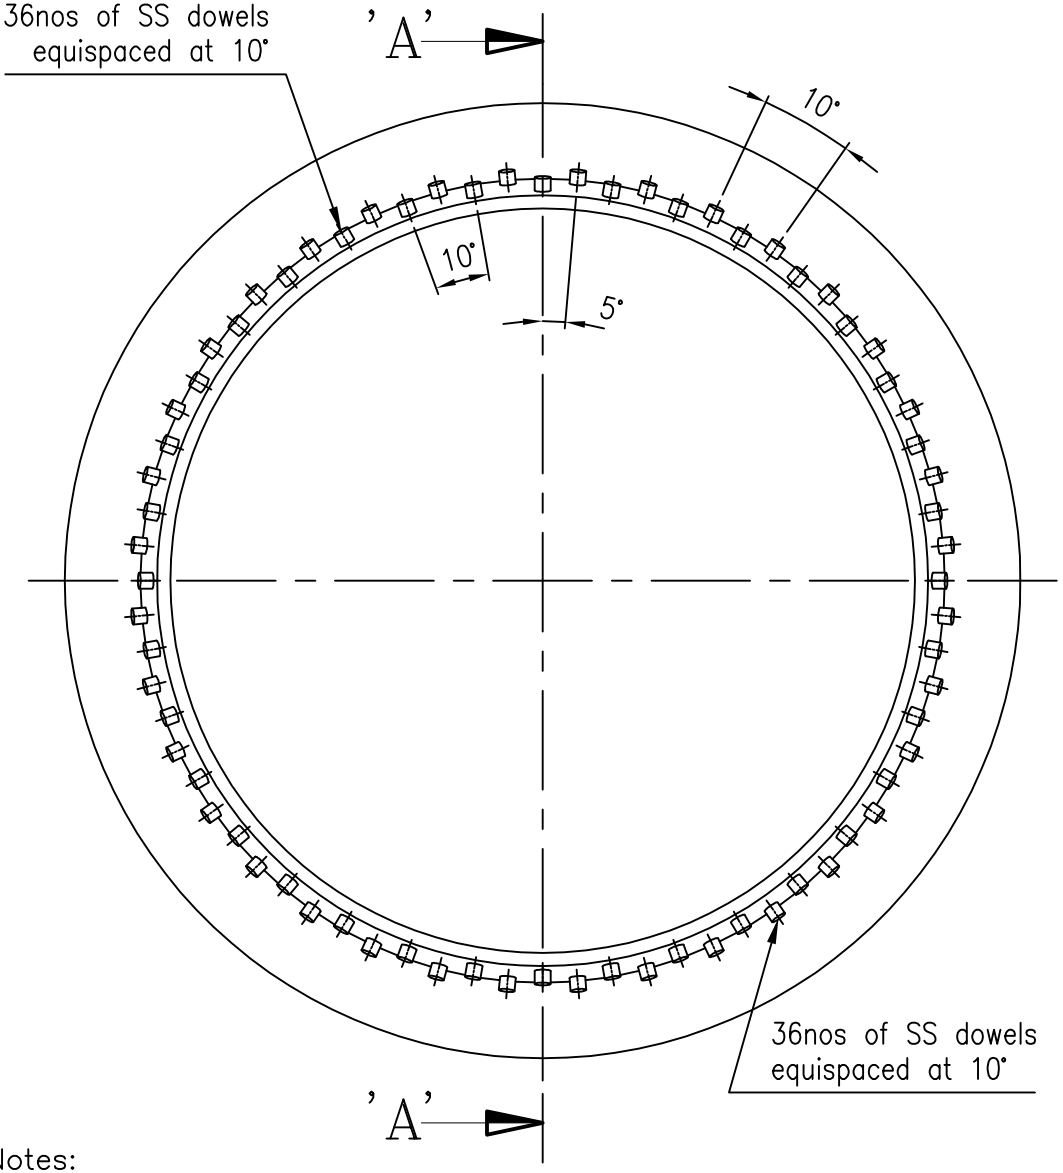

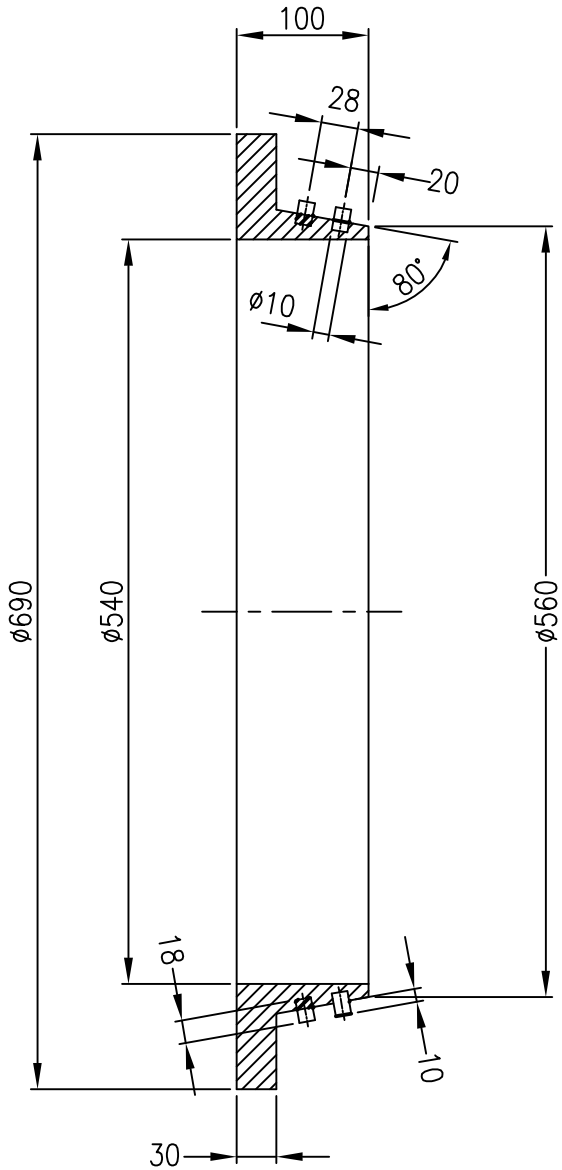

SECTION–'AA'

Notes:
1. SS dowels should be fitted tightly and tack welded at one place
2. Remove all sharp corners
3. General tolerance:+/−0.1

Material: SS316L

TORQUE TUBE END FLANGE